




## REMOVING AND REINSTALLING THE SUPPORT ASSEMBLY



### WARNING!

The operations described in this technical data sheet and those contained in the relative video tutorials which can be captured via QR CODE must only be performed by qualified technicians and only after having read the safety information contained in the specific sections of the use and maintenance manual.

*When in doubt, do not interpret! Instead directly contact the Colombini Srl technical assistance service at +39 011 8211407 [service@colombini.srl](mailto:service@colombini.srl)*

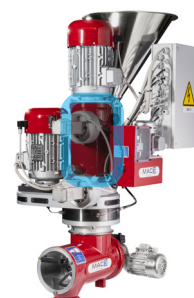

To remove/reinstall the support assembly, the following are required:

- a) lifting system with safety hook
- b) bolts with lifting ring and belt
- c) Phillips screwdriver
- d) socket screwdriver - 8 mm
- e) wrenches - 13 and 10 mm
- f) wrench - 8 mm
- g) wrench - 27 mm
- h) Allen wrenches - 8 mm, 6 mm, 5 mm, 4 mm, 3 mm and 2 mm
- i) socket screwdriver - 17 mm
- j) magnetic grinder
- k) supplied service wrench (code E0.0345)
- l) lifting hook for support assembly (Code FT.10.0005)



E0.0345

## REMOVING THE LOWER FINE GRINDING MOTOR

- Remove the machine power supply by turning the main switch to 0.
- Close the pneumatic power supply cock and disconnect the supply hose using the quick coupling.
- Disconnect the electric power coil.



- Using a 13 mm wrench, unscrew the four bolts and remove them with their washers.



- Withdraw the hopper and close the product access compartment with adhesive tape.



### WARNING!

The hopper weighs approx. 20 Kg. Be careful when handling it.



- Unscrew the motor fan power connector and remove it.
- Unscrew the four screws and withdraw the motor fan.



- Unscrew the four screws and remove the cover of the motor electrical box.



**WARNING!**

**Save/photograph the position and colour of the three power supply cables for subsequent reassembly.**

- Using a 8 mm socket screwdriver, unscrew the three nuts and remove them with their washers, and then withdraw the three power supply cables.
- Unscrew the upper screw and remove it with its washer and then withdraw the yellow-green earth cable.



- Fit the lifting rings on the motor using the two threaded hooks. Use the threaded holes found above on the sides of the motor.
- Secure the belt for lifting to the rings.
- Tighten the rings and make sure that the belt is correctly restrained.



**WARNING!**

**Use an appropriate lifting system compliant with the standards and rated for the load.**

Weight of the motor: Kg. 30.

- Save/photograph the correct position of the motor for subsequent reassembly.



- Using a 10 mm wrench, unscrew the eight bolts securing the motor to the machine and remove them with their washers.
- Lift and handle the motor in compliance with the standards.



- Using a 3 mm wrench, unscrew the three Allen screws securing the lubricator.
- Release the quick coupling to disconnect the grease feed hose from the valve and remove both support and valve.
- Withdraw the lubrication hose from the inside and, using your hands for leverage, lift off the white grease distribution disc attached to the hose.



- Move to the oil lubrication control unit. Unscrew the four screws, with washers, securing the transparent Plexiglass protection panel in front of the control unit. Use a 8 mm wrench.
- Disconnect the lubrication hose from its quick coupling inside the control unit.
- Withdraw the oil feed hose from inside the control unit by pulling it outwards.
- Withdraw the oil lubrication hose from inside the support assembly.



**WARNING!**

**Wear protective gloves.**

## WITHDRAWING THE FINE GRINDING MICROMETRIC ADJUSTMENT WHEEL



9

- Unscrew and remove the red silicone caps protecting the internal screws.
- Using a 2 mm Allen wrench, unscrew and remove the upper screw and remove the side screw with a 4 mm wrench.
- Remove the complete assembly.

## REMOVING THE LOWER FINE GRINDING DISC



10

- Unscrew and remove the Allen screw securing the seal ring and remove it from its seat. Use a 5 mm Allen wrench.
- Turn the extractor unit fully outwards.
- Using a 6 mm wrench, loosen the six Allen screws locking the duct.



11

- Remove the duct towards the bottom.
- Insert the supplied service wrench (Code: E0.0345) into the arranged hole and turn the disc leftward all the way to the stop.
- Release the central nut using a 27 mm wrench.
- Turn the disc to the right and remove the service wrench.
- Unscrew the central nut while supporting and removing the assembly consisting of the lower fine grinding and rough grinding discs.



### CAUTION!

**We recommend that a second person support the grinding discs throughout removal operations.**

## REMOVING THE SUPPORT ASSEMBLY

- Locate the three bolts securing the drive shaft inside the body of the support assembly.
- Using a 17 mm socket wrench, unscrew the three bolts.



12

- Position the support lifting hook (code FT.IO.0005) inside the threaded hole on the shaft and secure it using the Allen screw and a 8 mm Allen wrench.
- Partially withdraw the support assembly from the base.



### CAUTION!

**Make certain that oil does not leak from the support assembly.**

- Fully withdraw the support assembly from the machine.

## REINSTALLING THE SUPPORT ASSEMBLY



### WARNING!

**Wear suitable slip-resistant gloves.**

- Thoroughly clean the inner compartment.



13



### WARNING!

**Be careful when inserting the support assembly.**

**The slot on the support assembly must line up with the indicated hole in the compartment (the larger hole).**

- Insert the support assembly all the way into the compartment, unscrew and remove the upper Allen screw.

- Remove the tool used for extraction and reassembly.
- Using a magnetic grinder, position the three securing bolts and tighten them using a 17 mm socket wrench.
- Insert the transparent hose connected to the support assembly into the passing hole inside the compartment and then into the passing hole on the oil control unit.
- Insert the hose into its quick coupling inside the control unit box.
- Properly lay out the hose at the bottom of the housing.
- Insert the fine grinding micrometric adjustment wheel



#### **CAUTION!**

**Be careful when inserting the adjustment assembly. The hole on the shaft of the assembly must line up with the hole on the machine.**

**The motor electrical box must be positioned facing upwards.**

- Insert the adjustment assembly and secure it from above with a 2 mm Allen screw and from the side with a 4 mm Allen screw.
- Protect the screw compartments with silicone.
- Insert the white grease distribution disc and pass the hose connected to the disc out through the special hole.
- Connect the grease hose to the quick coupling on the lubricator support flange.
- Install the flange with lubricator using the three 3 mm Allen screws.



#### **WARNING!**

**Reinstall the lower fine grinding motor. (See sheet no. 01).**



#### **WARNING!**

**Run mechanical fine grinding zero calibration.**

**(See sheet no. 8).**



#### **WARNING!**

**Reinstall the lower fine grinding disc.**

**(See sheet no. 03).**



#### **WARNING!**

**Run the grinding disc reset procedure.**

**(See sheet no. 05).**

The texts, trademarks, and images contained in this sheet and in the relative videos that can be captured via QR CODE are protected by copyright laws and are the property of Colombini Srl; the User must not republish, modify, rework, or commercially exploit these contents in any way.

The instructions given in this sheet represent general good practice. COLOMBINI SRL is not responsible for the conditions in which its systems are installed and thus cannot be held liable for the specific variations required to adapt them to the industrial context; in this regard, see the safety, prevention and protection indications in force at the User's site.

The User acknowledges and agrees that COLOMBINI Srl, and its suppliers, will not be held liable in any way for any sort of damage of any nature whatsoever, even as related to lost profits, resulting from the User's public use of the video tutorials and related content.

It is understood that this technical data sheet and the contents of the video tutorials available via QR CODE are strictly indicative. COLOMBINI Srl provides this technical documentation for the sole purpose of facilitating the maintenance operations described. In particular, neither COLOMBINI Srl nor its suppliers are responsible for any infringement of the law or of third party rights by the User derived from implementing the contents of the above-mentioned video tutorials.